




**TT-181-200**

**Technical Data Sheet**

**Jumbo-Roll Toilet Tissue Dispenser  
Surface Mounted**

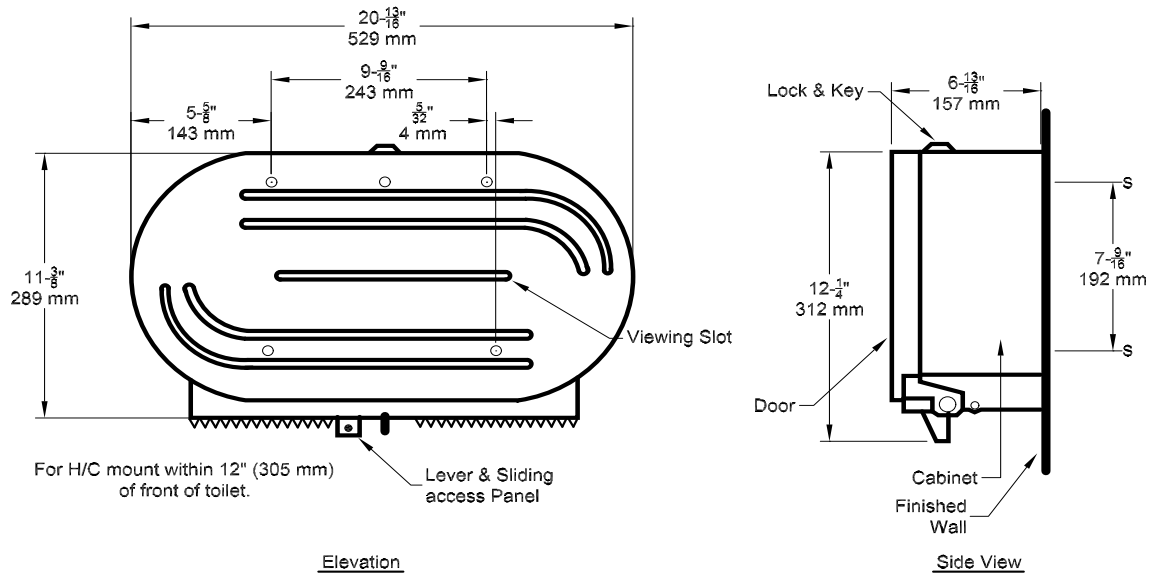

**MATERIALS:** Surface Mounted Jumbo - Roll Toilet Tissue Dispenser unit cabinet, door and mounting plate to be fabricated of alloy 18-8 stainless steel, type 304, 18 gauge with a No 4 satin finish. Dispensing mechanism will be fabricated of high impact chemical and flame retardant ABS.

**CAPACITY:** Two 9" Diameter Toilet Tissue Rolls

**OVERALL SIZE:** 20 13/16" W x 11 3/8" H x 6 13/16" D  
(529 mm W x 289 mm H x 157 mm D)

**SPECIFICATIONS:** Roll Toilet Tissue Dispenser shall hold two (2) 9" Diameter rolls of 3" Diameter or 2-1/4" Diameter core tissue. Unit cabinet, door and mounting plate are to be fabricated of alloy 18-8 stainless steel, type 304, 18 gauge with a No 4 satin finish and to be protected by a PVC film removable after installation. Door will be of one piece seamless construction with integral rigid ribs and shall be provided with two (2) tissue level viewing slots. Door will be hung on heavy duty stainless steel pivot hinges and will be held closed by a tumbler lock keyed to other Columbia Accessories equipment. Dispensing mechanism will be fabricated of high impact chemical and flame retardant ABS. Unit will accommodate smaller core size rolls by removing the core adapters. When one roll is depleted, other roll can be selected by shifting over panel lever at bottom of unit. Unit will automatically reset to first roll during maintenance access.

**INSTALLATION:** For general utility surface mount unit within 12" of front of toilet from center line and 31" above finished floor (AFF) from bottom of unit with five (5) screws (supplied) through mounting holes provided. For compliance with ADA Accessibility Guidelines install unit so that centerline of farthest roll or leading edge of first roll, whichever is farthest, is no farther than 36" from back wall behind commode and centerline of rolls is 19" minimum above finished floor (AFF) to 44" maximum AFF.

The manufacturer reserves the right, without formal notification, to implement changes to the design and dimensions.  
© 2008 Columbia Accessories  
Edition: TT-181-200/001



PO Box 181, Columbia, SC 29202  
Phone: 1-866-820-3579 Fax: 1-866-317-2786  
Web Site: <http://www.natpart.com>